




# Installation Instructions

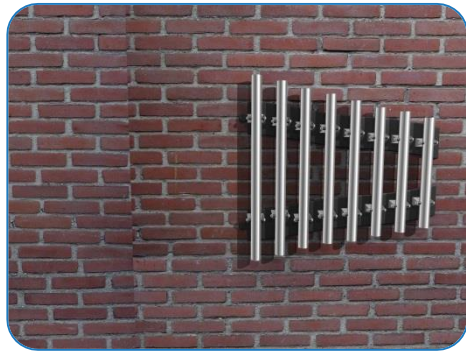

**1. Position the 2 sections of the Freechimes Symphony in desired location, according to correct Key stage height, this may require 2 persons.**

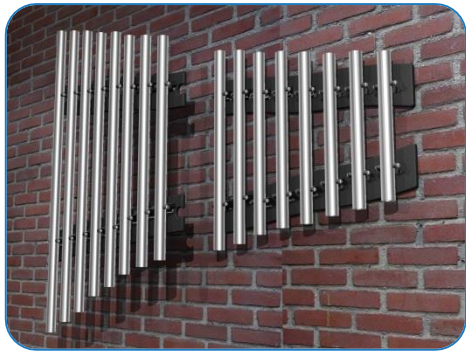



**2. Mark hole locations (X10) using the pre drilled holes in the Black HDPE Backboards**

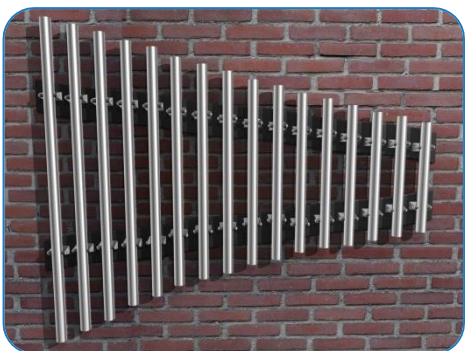

**3. Drill hole locations (X10) according to your chosen fixings (frame fixings, wall bolts or chemical anchors) depending of the structure of the wall.**

**4. Fix through Backboards (X10) with suitable fixings (not supplied) in correct orientation and Key stage**

**5. Beaters can be fixed to Backboards or directly to wall depending on customers preference. 1 Pair at each end and one in the centre.**

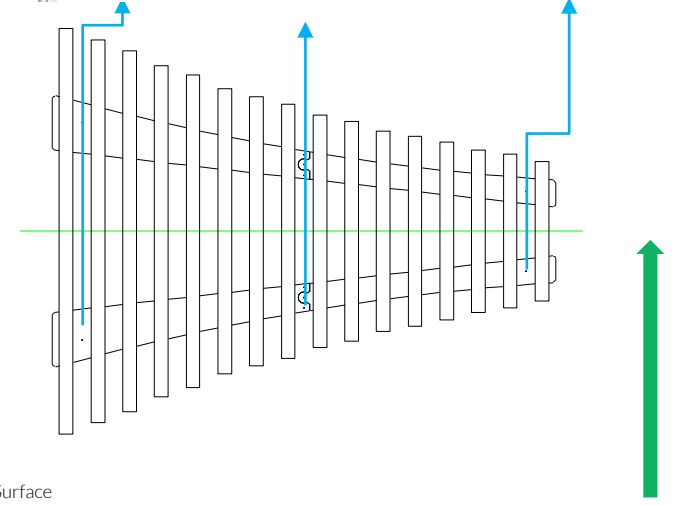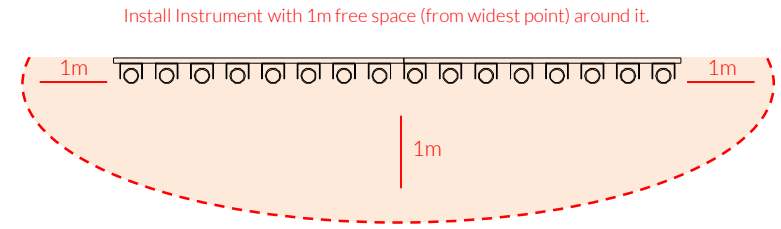


Ground Surface

KS1,2,

KS1 - 850mm  
KS2 - 1100mm

## Wall Fixed

Freechimes  
Pentatonic  
Symphony

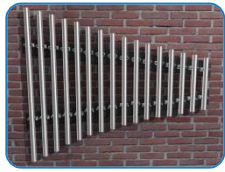

### Components:



Eye Straps  
X3



Pin Torx 25  
Driver Bit X1



10x38mm  
Secure Screw  
X6

Metric Conversion:  
850mm/ 33"  
1m/ 39"  
1100mm/ 43"



Pair Small  
Beaters X1

Pair Large Red  
Beaters X2

Wall fixings are not supplied, installer will select suitable method of fixing.

Wall Fixings/  
Anchors not supplied

Spares available form  
[percussionplay.com](http://percussionplay.com) or from your  
local distributor

48 Kg